


# Basic Lap Steel Guitar

Scale length:	22-1/2" and 24"
Drawn by:	Randy Cordle
Date:	5/07 Version 1.2
File:	Bluestem Free Basic Lap Steel Plan.dcd

This drawing provided by Bluestemstrings.com and may not be re-produced, copied, or used for any purpose other than individual use without the express written permission of the author.

Fret / Distance from nut	22-1/2"	24"
1	1-17/64"	1.26
2	2-29/64"	2.45
3	3-37/64"	3.58
4	4-41/64"	4.64
5	5-41/64"	5.64
6	6-19/32"	6.59
7	7-31/64"	7.48
8	8-21/64"	8.33
9	9-1/8"	9.12
10	9-7/8"	9.87
11	10-37/64"	10.58
12	11-1/4"	11.25
13	11-7/8"	11.88
14	12-31/64"	12.48
15	13-3/64"	13.04
16	13-37/64"	13.57
17	14-5/64"	14.07
18	14-35/64"	14.55
19	14-63/64"	14.99
20	15-13/32"	15.41
21	15-13/16"	15.81
22	16-3/16"	16.19
23	16-35/64"	16.54
24	16-7/8"	16.88
END	17-1/4"	17.25

Fret / Distance from nut	24"	
1	1-11/32"	1.35
2	2-5/8"	2.62
3	3-13/16"	3.82
4	4-61/64"	4.95
5	6-1/64"	6.02
6	7-1/32"	7.03
7	7-63/64"	7.98
8	8-7/8"	8.88
9	9-47/64"	9.73
10	10-17/32"	10.53
11	11-9/32"	11.29
12	12"	12.00
13	12-43/64"	12.67
14	13-5/16"	13.31
15	13-29/32"	13.91
16	14-15/32"	14.48
17	15-1/64"	15.01
18	15-33/64"	15.51
19	15-63/64"	15.99
20	16-7/16"	16.44
21	16-55/64"	16.86
22	17-17/64"	17.27
23	17-41/64"	17.64
24	18"	18.00
END	18 5/16"	18.31

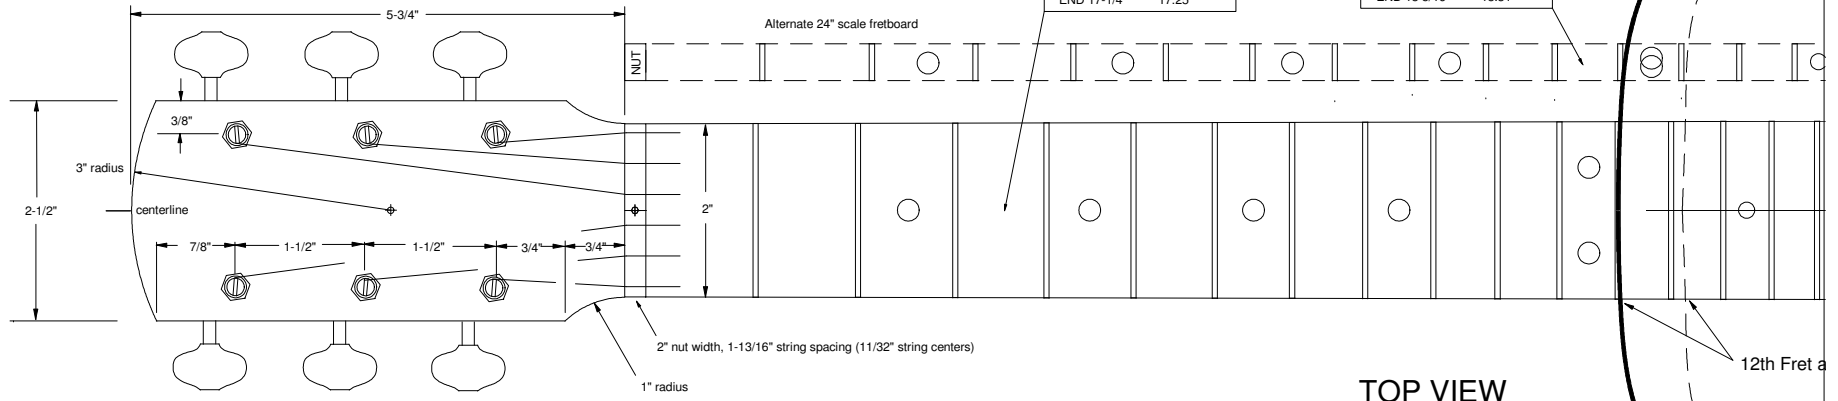

TOP VIEW

Dotted lines indicate alternate body size, bridge position, and fretboard location for 24" scale length if desired. Entire pickup assembly is re-located 1-1/2" further from the nut position and frets positions are re-located as per the fret layout chart.

If modification of this instrument plan is desired, feel free to experiment at will. The only critical dimension is the bridge position relative to the desired scale length. Pickup type and location, controls, bridge, string anchoring method, and pick guard material and size can all be modified as desired.

2-9/16"